




Patio Heater

PLEASE READ THE FOLLOWING INFORMATION COMPLETELY BEFORE USE

To Light Pilot & Turn On

1. Turn on propane at base of heater.
2. Rotate control knob to "Pilot" position.
3. Line up the raised "L" in PILOT to the red dot to the right.
4. Firmly depress knob and hold it down while you push the IGNITOR button to light the pilot.
5. Once the pilot light is lit keep the black knob held in for approximately 10-20 seconds to make sure it catches. Pilot should remain lit and you may now turn it to the "ON" position.

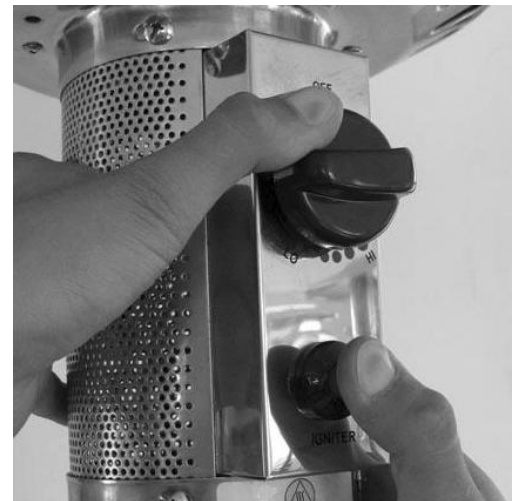

NOTE: Allow 1 ½ minutes to purge air through pilot after connecting with a new tank of propane

To Turn Heater and Pilot "OFF"

Turn knob to "Pilot" position. Depress slightly and turn to "OFF" position. Wait 5 minutes after complete shutoff of heater before relighting pilot. Turn "OFF" gas tank when heater is not in use.

If a problem occurs during use, please give Big 4 Party a call at (1-877-740-7444)

REMEMBER, you are renting this equipment. Be sure you are aware of the terms of your rental contract. Always return your chafing dish or tureen clean to avoid additional cleaning charges.