



Snow Cone Machine

Electrical power required: 100 volts, 6.8 amps.

Weight: Approximately 38 pounds

Dimensions: 28" Height x 24" Width x 14" Deep.

Preparation

Set the cabinet on the drip tray. Make sure to put the drain hole over an area that is okay to get wet or into a bucket. Melted ice, and condensation go into the drip tray.

Operating Instructions

1. Plug in machine. Turn **ON** light switch (located on front of cabinet). Light will come on in cabinet.
2. Push and hold the motor button
3. Wait for the motor to come to full speed
4. Fill the gooseneck to within an inch of the top with ice cubes or block ice. The larger the pieces, the better the snow.
5. Push the pusher handle down against the ice in the gooseneck. Apply firm and even pressure to make the best snow.
6. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.
7. Repeat steps until you have enough shaved ice.



WARNING!

The Snow Cone Machine can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size. The ice will not enter the shaving chute if it's too large. The design of the shaving chute automatically draws the ice against the blades. There is no need for manual effort. As a safety feature, the motor will only run while the motor button is depressed.

CAUTION: Never put any object into the snow cone machine body while the motor is running. Serious damage can occur to any body parts or objects that are placed inside the snow cone machine hopper.

Clean Up

Wipe all water and any syrup off of the cabinet inside and out. Clean the Dip Pan, ladle and Ice Scoop.

If a problem occurs during use, please give Big 4 Party a call at (1-877-740-7444)

REMEMBER, you are renting this equipment. Be sure you are aware of the terms of your rental contract. Always return your chafing dish or tureen clean to avoid additional cleaning charges.